

# Ovilus 3P



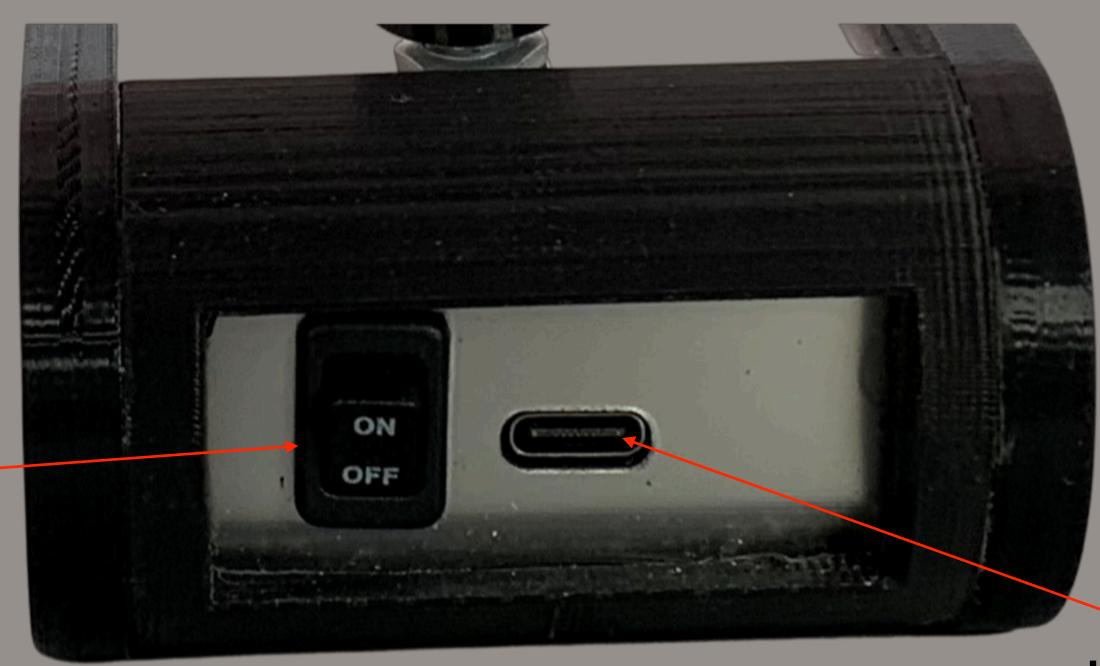

Power On/Off

**USB C Charge port no Data** 

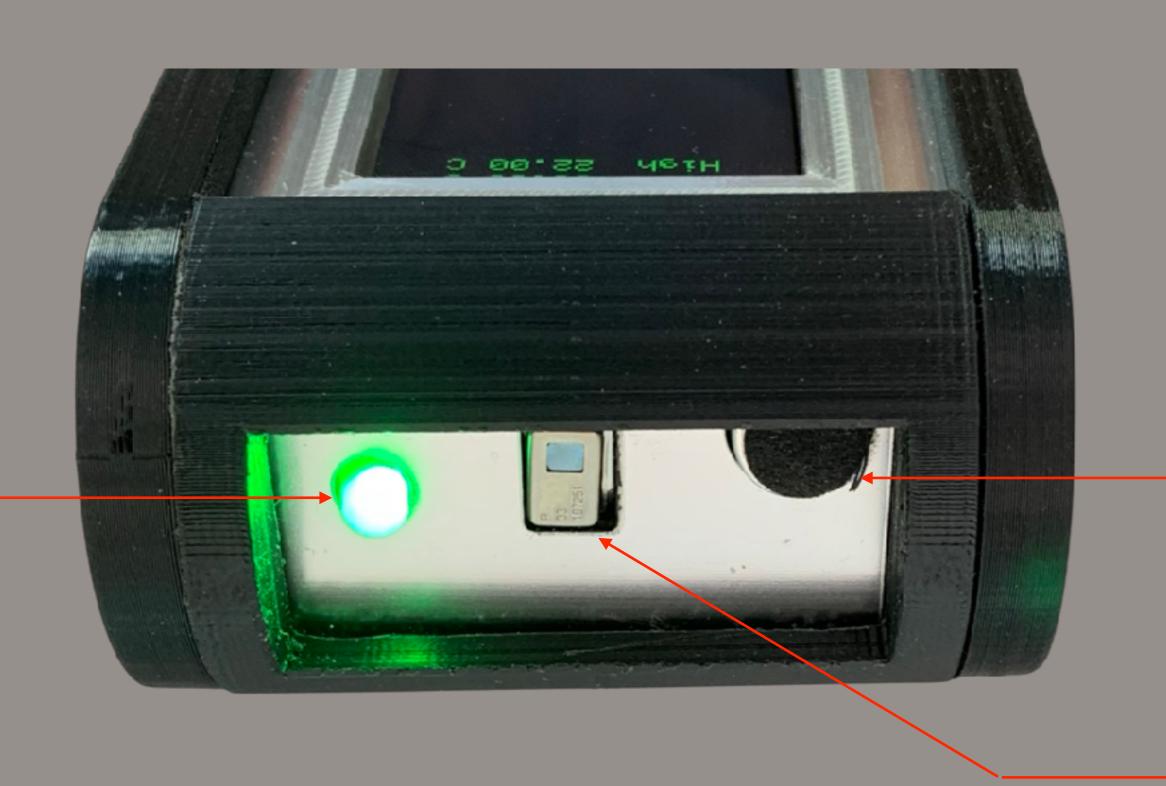

Audio Microphone


Thermal Imager 8x8

**Multi Color LED** 

> 9 Flashlight

Ovilus ® 3 Plus


Bill Chappell Signature Series ®

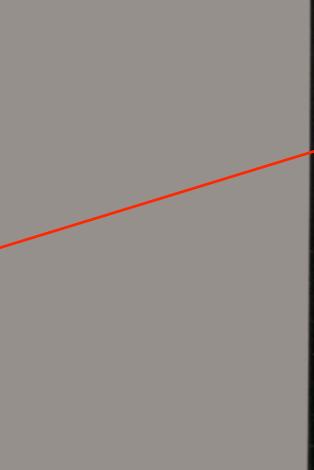


Display

Screen

Selection Control
Right / Left to move through
menus. Push Down to Select

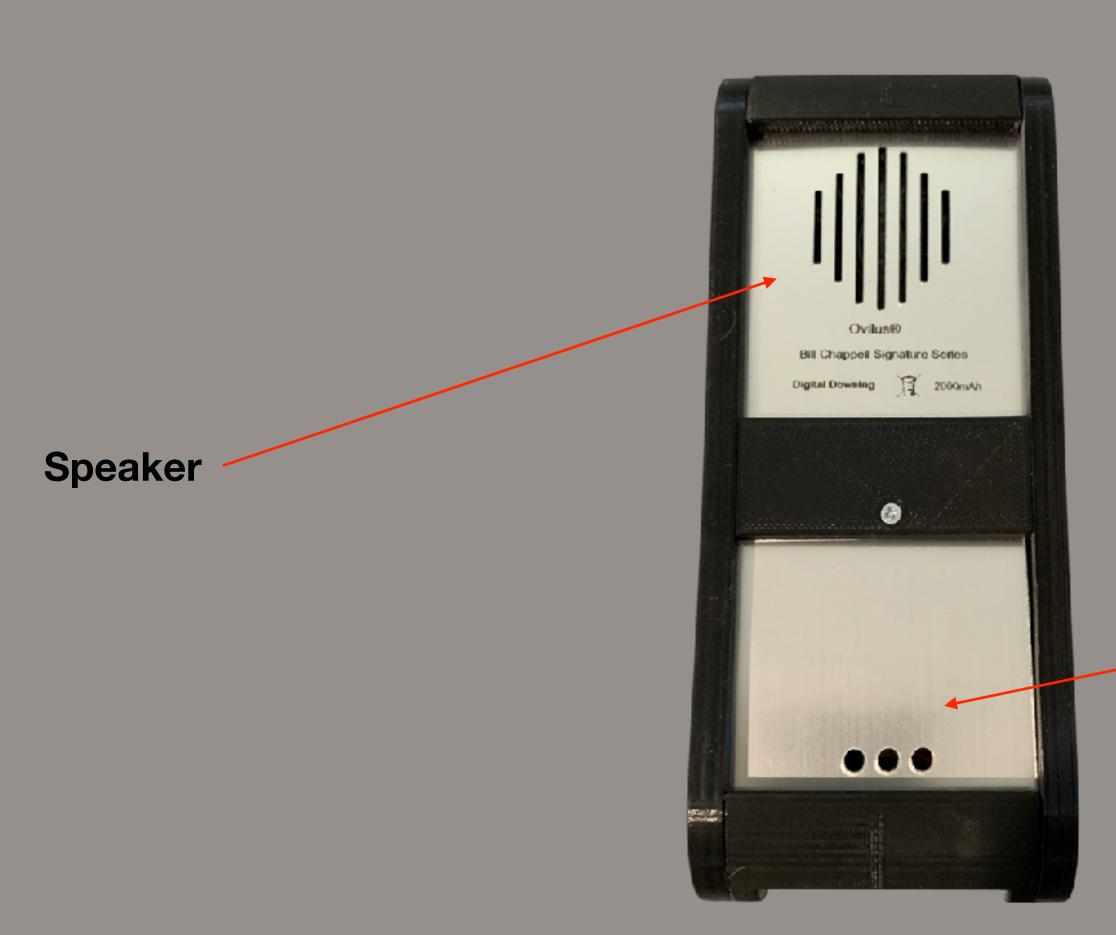

**Battery Cover / Charger light** 

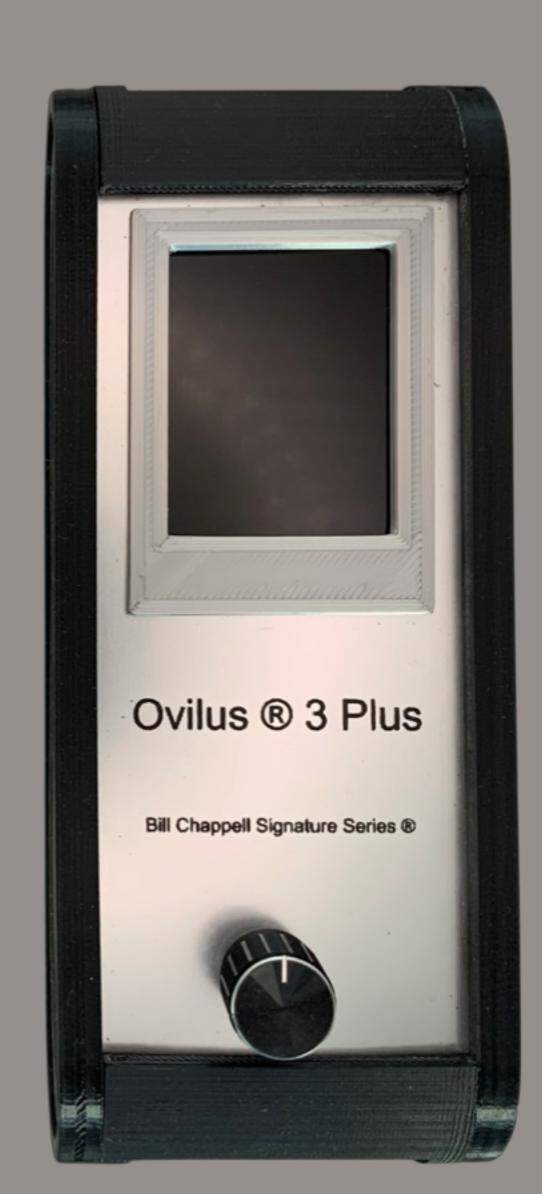


SD CARD Installs with Pins UP



Press to start Speech Mode 1
Scroll right or left to change
menu item

**Current Spoken Words Appear Here** 

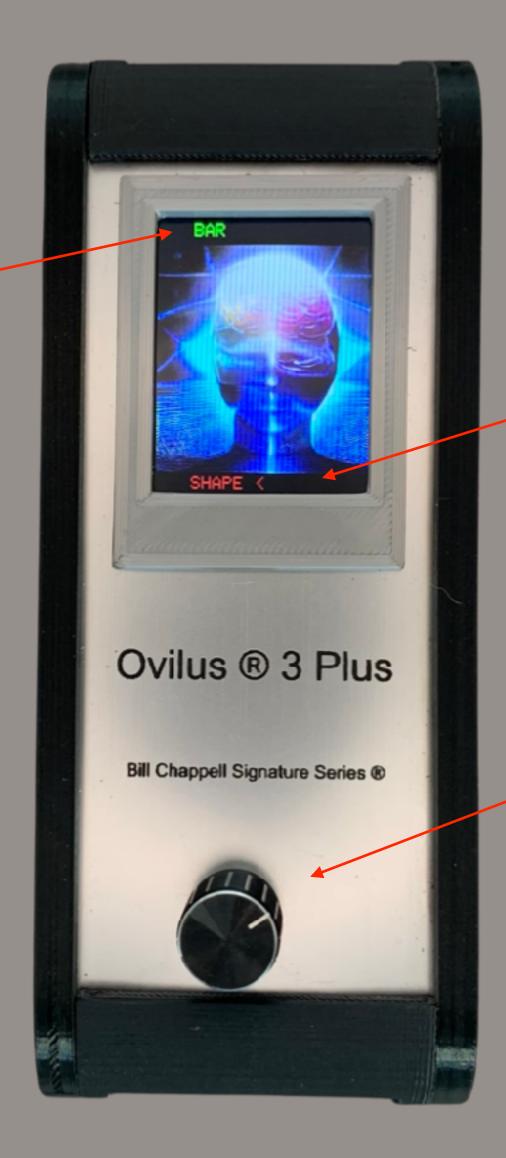

Move Right or left to scroll through previously spoken words


Scroll right or left to see previously spoken words.
Press Down to end Speech Mode 1



Mode

Press to start Speech Mode 2 Scroll right or left to change menu item

**Current Spoken Words Appear Here** 

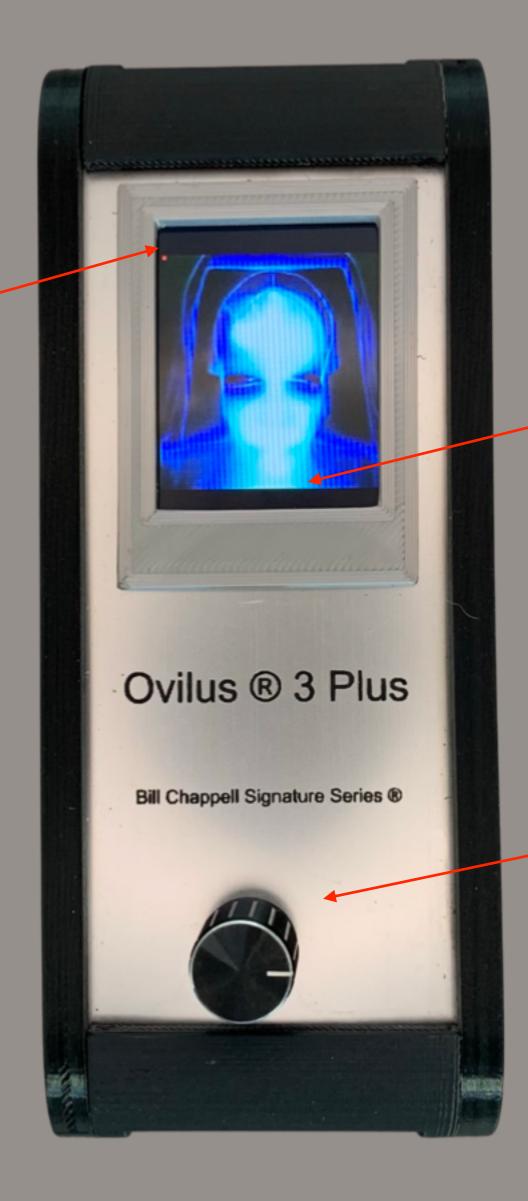

Move Right or left to scroll through previously spoken words

Right to left to see previously said words. Press Down to end Speech Mode 2.
Uses the user file see \*\* Speech Mode 2 description for details.



**Press to start Phonetic Mode 1** 

No words Appear in Phonetic modes



Press Down to end Phonetic Mode 1




**Press to start Phonetic Mode 2** 

No words appear in Phonetic Mode 2



Press down to end Phonetic mode 2

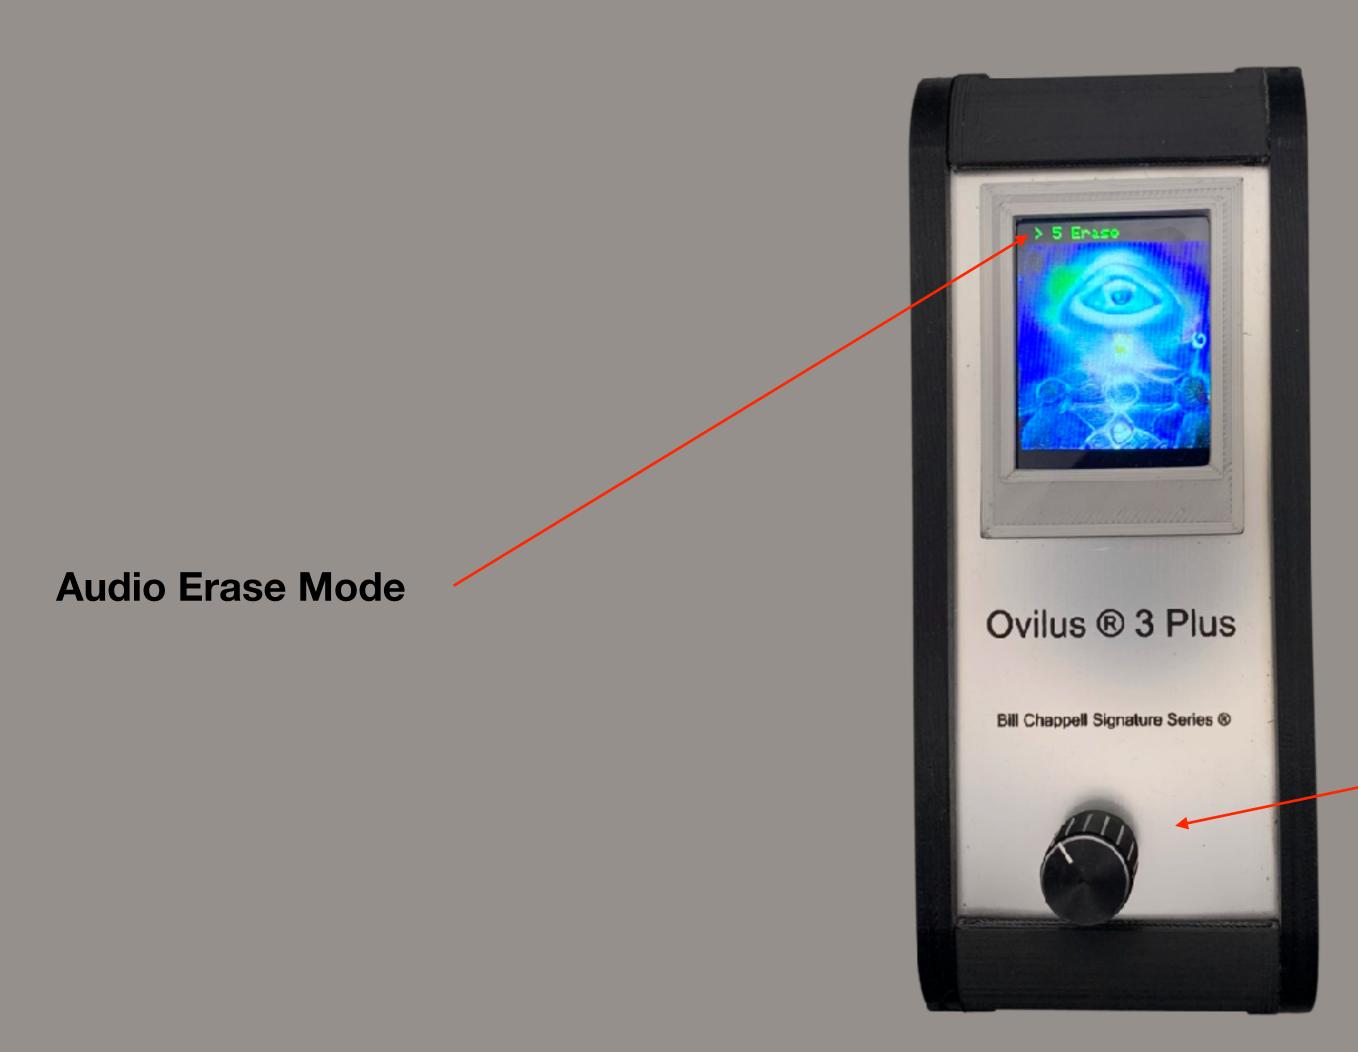

This Mode will instantly erase all audio files



Audio Erase may take a few minutes. file see \*\* See Audio Erase for details.



**Audio Record Mode** 

Press to start Audio Record Mode.

Record time appears here



Press down to end recording see Audio record for details.



Audio Playback Mode

Press to start Audio PlayBack



Press down to end Audio Play Back, Scroll right or left to select file number.


**Audio Play Back** 



**Thermal Display Mode** 

**Press to start Thermal Display** 

Thermal display 32x32 8x8 interpolation

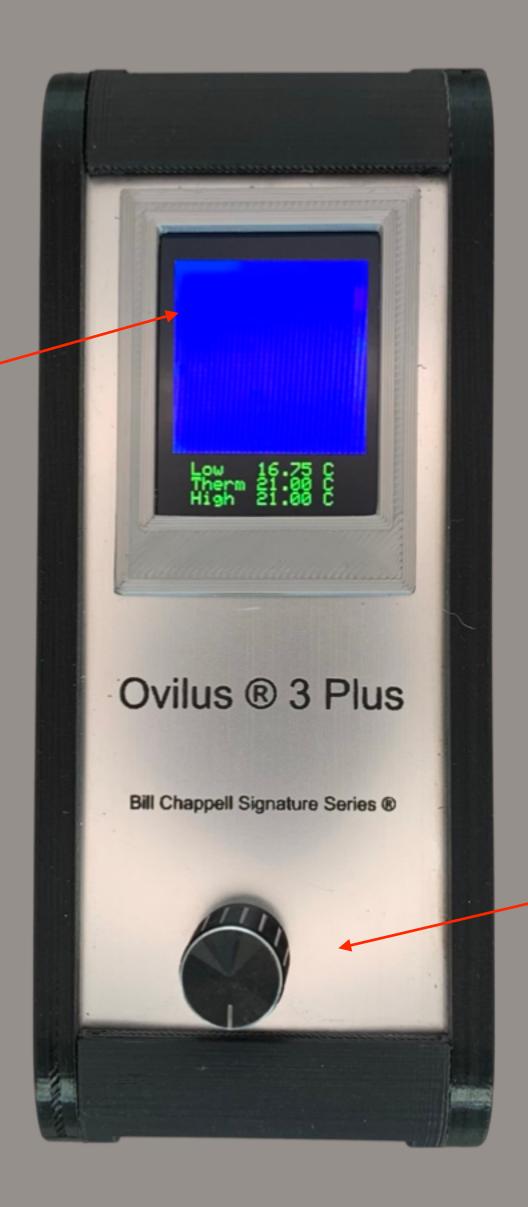


Press down to end Thermal Mode



Press to start Thermal FlashLight

**Thermal Flashlight Mode** 

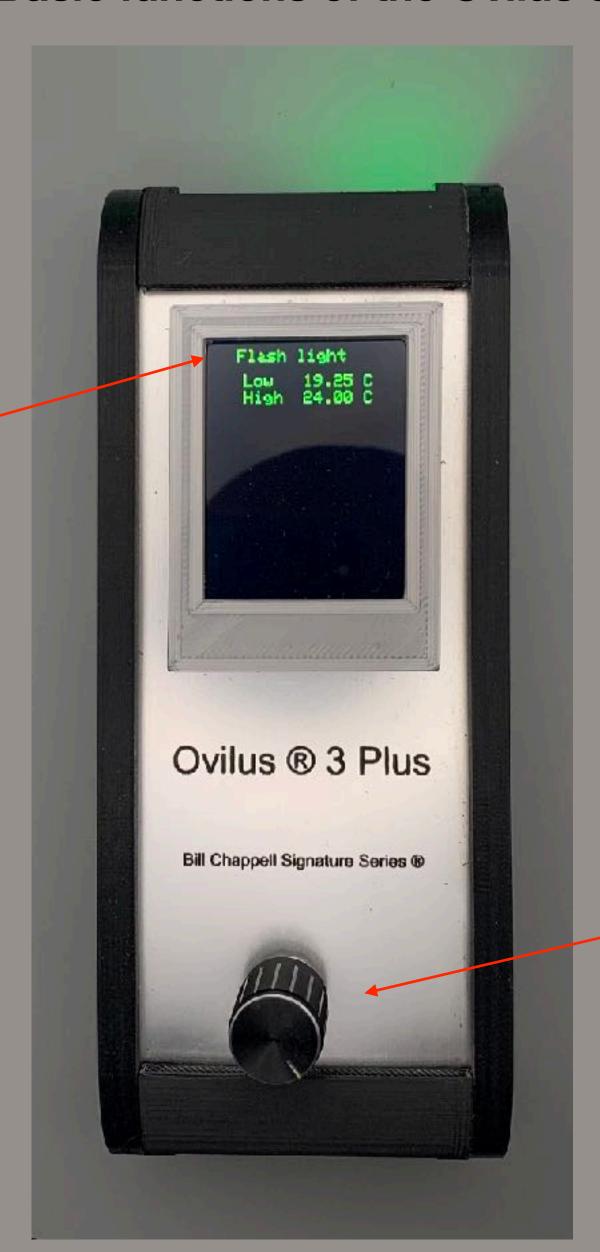

Press down to end Thermal Flashlight Mode

**Shows Temperature** 



Read Log File

**Press to start Log File Readout** 



Press down to end Log Filey Back, Scroll right or left to see additional pages.

Log File




**Erase Log File** 

Press to erase log file, Beep will sound turn off and back on to clear file



**User File** 

**Press to show User file** 

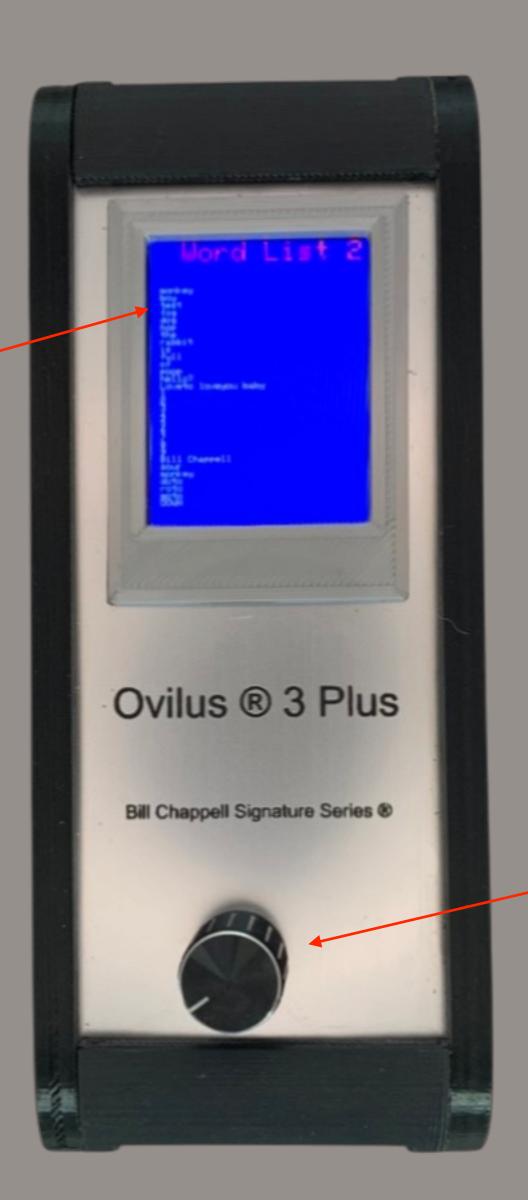


Press down to end Log Filey Back, Scroll right or left to see additional pages.

Log File



**About** 

Press to see latest information about current firmware build

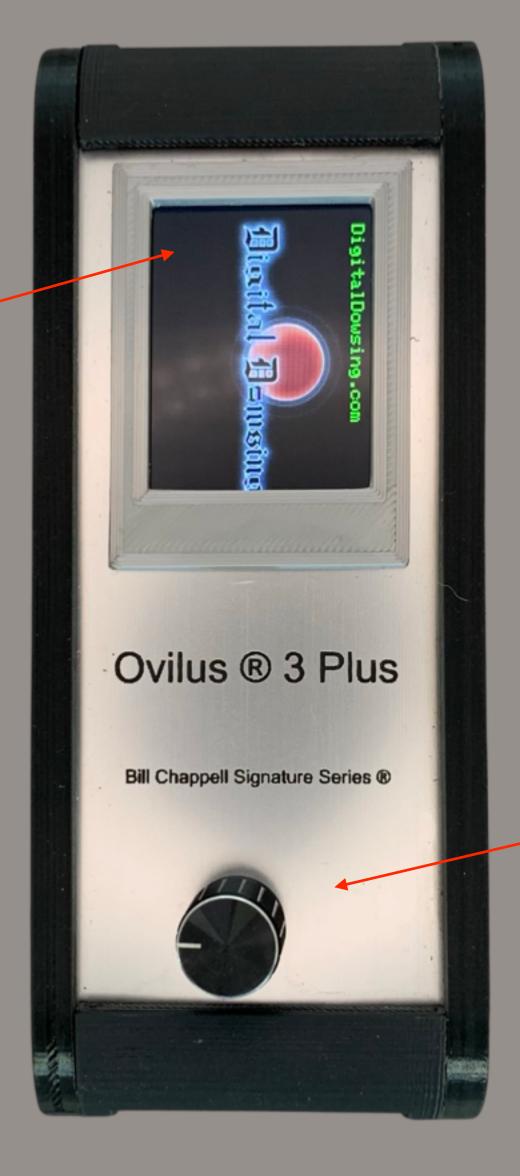

**Firmware Information** 

Press down to exit



Firmware update

Press to install latest firmware See Updates for more information.

**Update Progress or errors** 



When Complete press down to exit. See Update in for more information.